



Dragonclaw v0.2 1.8V Load Switch Rework

<https://docs.google.com/drawings/d/1YhOUD-Qf69NUdugT6n0cX7o7CWvb5begcdmJwv7ch6I>

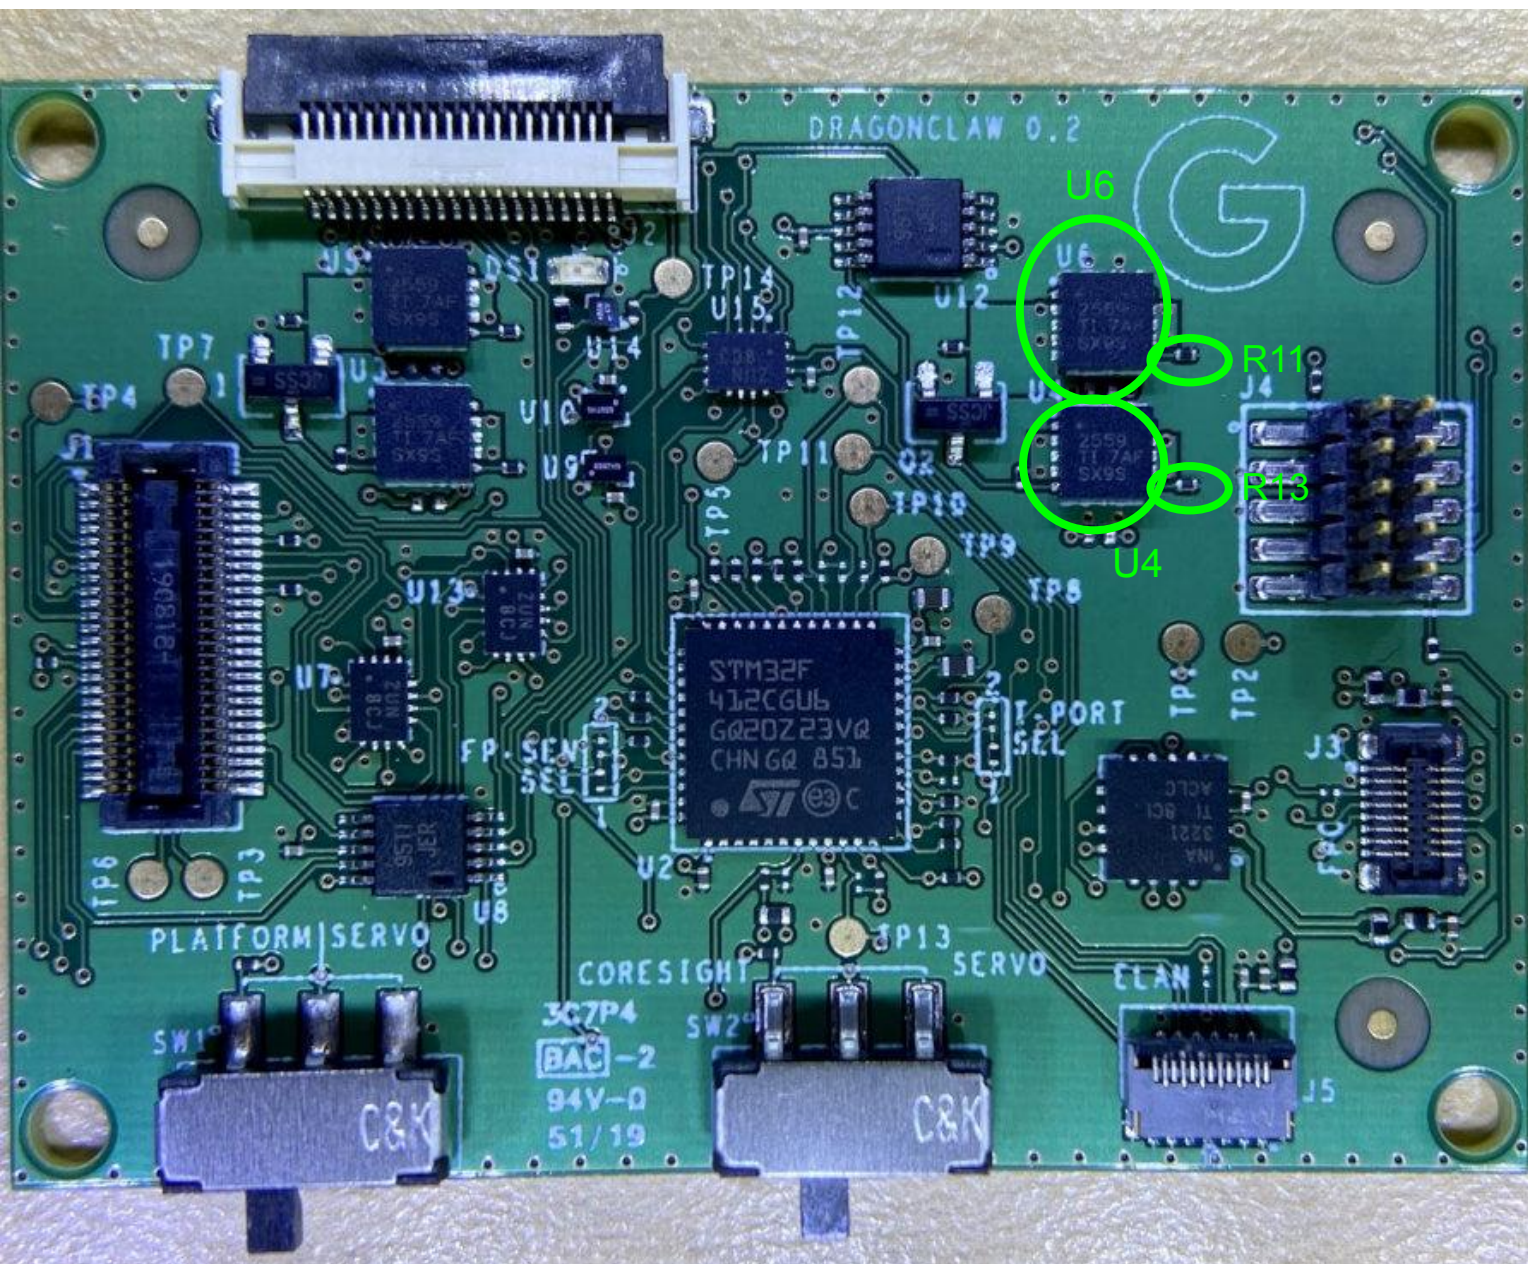

<https://www.digikey.com/product-detail/en/on-semiconductor/FPF2125/FPF2125CT-ND/1923109>

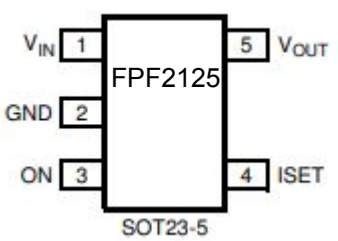

Remove U6 and U4. Replace with FPF2125.

Right-align FPF2125 with existing footprint.

V_{out} and Iset line up with the right side pads.

GND lines up with the center ground pad.

Lift up the V_{in} and ON legs and use small wire to connect it to the left pads.

Replace R11 and R13 with 10K Ω resistors.

